

Notice : How to place your stickers on glass (with water)

Clean the glass

It is important to remove dust, smudges and fat to prevent any peeling and defects in placement.

Ensure that the transfer paper adheres properly to the sticker

Place your sticker on a flat surface (transfer paper upwards) and drag the squeegee (or a credit card) on the sticker

Soapy water

Pour a little water in your spray bottle and add soap for dishes (Maximum 2%).

Using the spray, generously wet the glass.


Completely remove the adhesive protection

Place sticker on the wet glass, the transfer paper being in contact with the wet glass. Crudely pass hands on it, it will hold by capillarity on the glass.

Remove the adhesive protection (Part lying on the side of the 'glue' of the sticker).

sprayed à little soapy water) on the wet glass
At this stage, soapy water will allow you to drag your sticker to place it in the desired position.

Using the squeegee (or a credit card), chase water located beneath the sticker from the center towards the edges, initially very lightly. Then repeat the operation several times (4 to 5 times) by pressing increasingly stronger. Then, wipe with a cloth to remove the maximum of water.

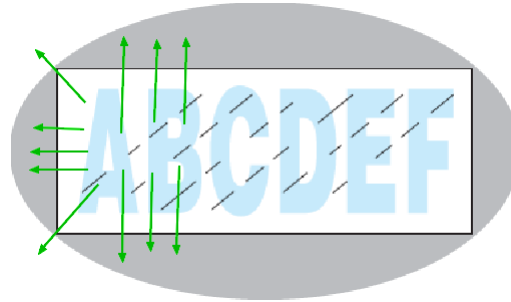

Let it dry a little

At this stage, your sticker should stick slightly on the glass (the glue had regained its adhesion 36 hours later).

Dry transfer sheet slightly before removing carefully (with a maximum angle of 30°). Ask for help to someone who will keep in place the sticker if sticking is not yet sufficient



Note: if you do not use a squeegee for the laying of sticker, be careful to not scratch or tear the sticker. If necessary, place a micro-fiber cloth around the credit card or other.

If the stickers was placed on a vehicle, please wait a minimum of 1 hour before using it.

Thank you for choosing Stickers



<http://www.artandstick.be>
info@artandstick.be

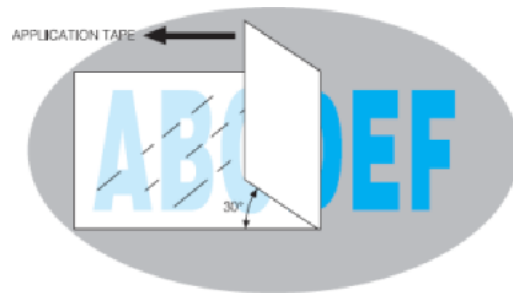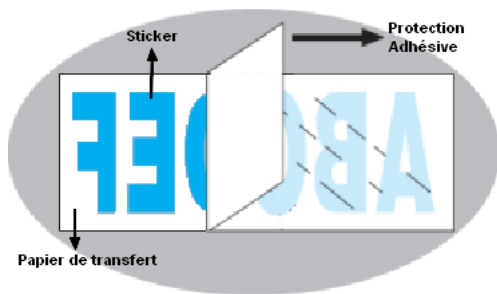

Spray soapy water on the sticker

Using the spray bottle, very lightly moisten the adhesive part of the sticker.

Final placement of your sticker

We must now return the sticker in the right direction. That is the sticky part of the sticker (on which has been

If the sticker moves a little and peels off, don't panic, once transfer paper removed, it will be always possible to drag the squeegee on the sticker, to stick it back or remove air bubbles which appeared during the removal of the transfer paper.